


Product Information Bulletin

64 Outwater Lane, Garfield, NJ 07026 Ph: 973-340-7889 | Fax: 973-340-7809

Y4949 - Concrete Anchor Kit For Mounting Sign Base

Specification

- **Size:** ½ × 4" Lag Screws + ½ × 3" Concrete Anchors + ½" Washers
- **Material:** Zinc Plated Steel Lag Screws and Washers with Plastic Anchors
- **Note:** For use with Fixed Base Y4946 and 78FLEXYPOST

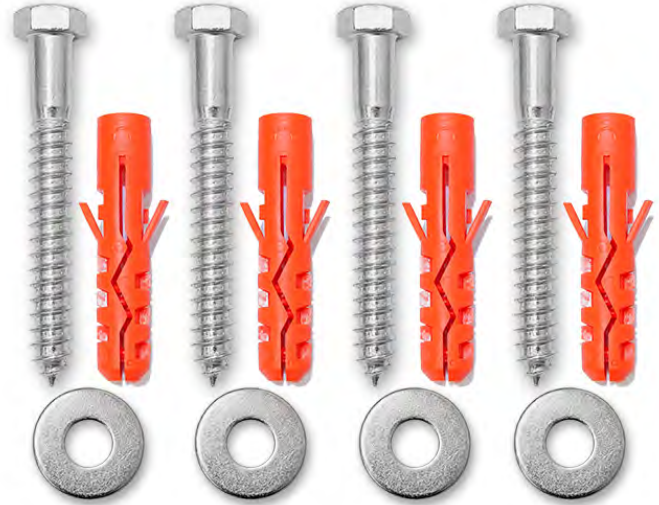

- Concrete Anchors Kit include the following:
- 4 - 1/2" x 3" long concrete orange anchors
- 4 - 1/2" x 4" long -partial thread- lag screws
- 4 - Washers

Materials Needed for Installation

- Drill with 5/8" (16mm) Bit
- Small Hammer
- 1/4" Allen Wrench
- One of the following: 3/4" (19mm) socket, 3/4" (19mm) wrench or adjustable wrench.

Installation Steps

- Place Fixed Base on surface, align to desired position. Using the base as a template, mark the four (4) holes to establish pattern for drill.
- Drill four (4) holes 3" (75mm) deep using a 5/8" (16mm) drill bit. Clean holes.
- Using a small hammer gently tap the anchors into the holes.
- Place base over the anchors. Put washer onto lag screw. Start lag screw through base hole into anchor. Use 3/4" wrench to tighten lag screw snug into base.
- Place the sign or post into base, check for proper alignment and hand tighten all four socket cap screws. Use 1/4" Allen wrench to snug screws.



DATE: ___ / ___ / ___

JOB: _____

CONTRACTOR: _____